

Aimpoint®

User's Manual
killFLASH®




Model #M68-ARD (Anti-Reflection Device) This ARD is sized to fit the Aimpoint® M68 Close Combat Optic

THE FUTURE IN SIGHT.

Aimpoint Art. No. 10345 / NSN 6650-01-479-5386

INSTALLATION:

- 1 Open front lens cover & press ARD into the front of the sight with ARD's notches facing outwards.

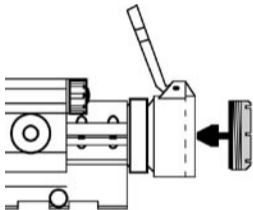

- 2 Using the flats of two fingers, press against the front of ARD and rotate counter-clockwise approximately 1/4 turn until you hear a slight "click" and the ARD is level in the front of the sight.



- 3 Using the flats of two fingers, turn the ARD clock-wise, screwing it into the front of the sight until the front of the ARD is flush with the front of the cover. Do not over-tighten.



CLEANING:

Treat the honeycomb mesh with the care you would treat any optical surface.

To clear snow or water from honeycomb when ARD is mounted, blow sharply into face of ARD near one edge.

If clogged with dirt or mud, remove the shield from the sight and blow clean. If necessary, you can also run water through the honeycomb to clear it. Blow through the mesh to remove the water.

*If they don't see you...
...they don't shoot you™*

**Manufactured for Aimpoint AB
by Tenebraex Corp., USA**